

Felkodsläsare 15-1310 OBDII

Feilkodeleser 15-1310 OBDII

Virhekoodinlukija 15-1310 OBDII

Fejlkodelæsere 15-1310 OBDII

OBD/EOBD

Monitor Status

Read Codes

Current DTCs

Pending DTCs

Permanent DTCs

Erase Codes

Data Stream

FUELSYS 1

FUELSYS 2

LOAD PCT

ECT

SHRTFT1

LONGFT1

SHRTFT2

LONGFT2

FRP

MAP

RPM

VSS

SPARKADV

IAT

MAF

TP
AIR STAT
O2S11
O2S12
SHRTFT12
O2S21
SHRTFT21
O2S22
SHRTFT22
OBDSUP
PTO STAT
RUNTM
MIL DIST
FRP
LAMBDA11
O2S11
LAMDA12
O2S12
LAMBDA2
O2S21
LAMBDA22
O2S22
EGR PCT
EGR ERR
EVAP PCT
FLI
WARM UPS
CLR DIST
EVAP VP

BARO
LAMBDA11
O2S11
LAMBDA12
O2S12
LAMBDA21
O2S21
LAMBDA22
O2S22
CATEMP11
CATEMP21
CATEMP12
CATEMP22
VPWR
LOAD ABS
LAMBDA
TP R
AAT
TP B
TP C
APP D
APP E
APP F
TAC PCT
MIL TIME
CLR TIME
FUEL TYP
ALCH PCT
EVAP VPA

EVAP VP
STSO2FT1
LGSO2FT1
STSO2FT2
LGSO2FT2
FRP
APP R

Freeze Frame

I/M Readiness

MILL
MIS
FUEL
CCM
CAT
HCAT
EVAP
AIR
O2S
HTR
EGR

Vehicle information

Vehicle ID Number
Calibration ID
Cal. Verf. Number

Ready Test

MIL	IGN
DTC	Pd DTC
MIS	EVAP
FUE	AIR
CCM	O2S
CAT	HRT
HCAT	EGR

Setup

Language
English
Francais
Unit of Measure
Metric
English
Key Beep Set
Status Beep Set
Fn Key Set

About

F/N

Datastream

LOAD	IAT
ECT	MAF
FRP	TP
MAP	RUM
RPM	DIST

VSS

Pro